


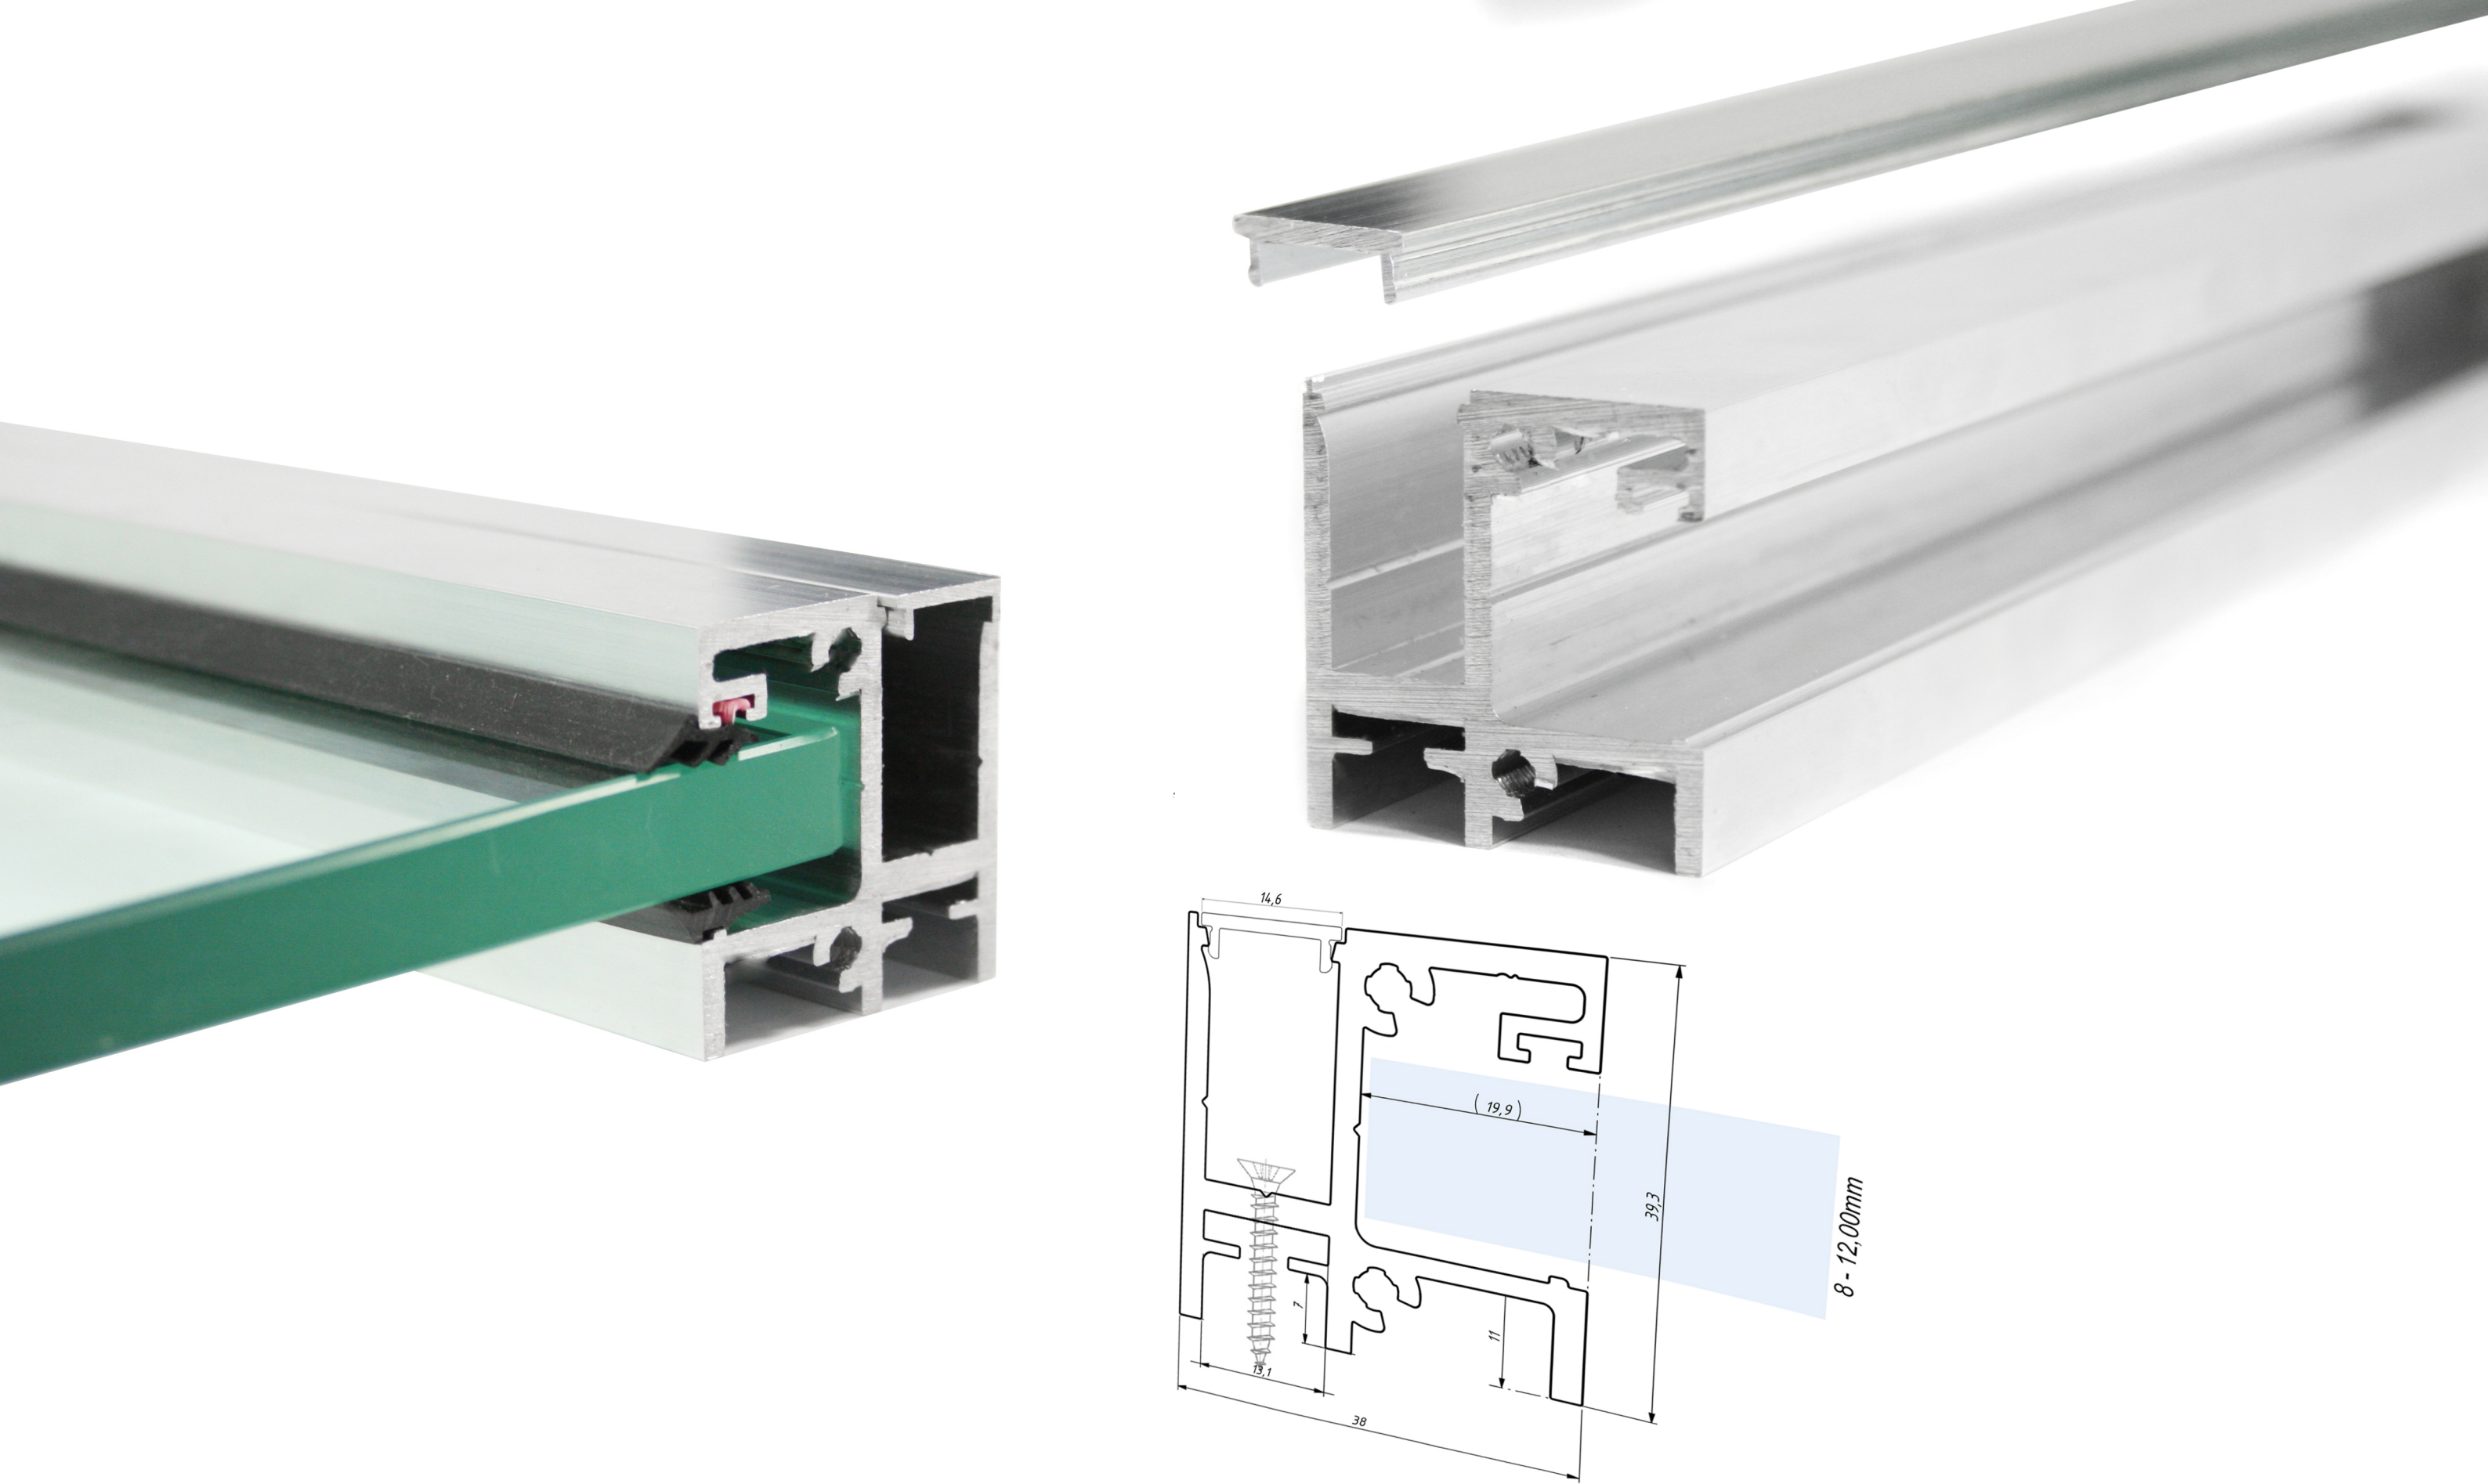


Set of profiles mounted to the window frame

RX







RAW ALUMINUM

Product code: BF.RX.1100.AL.R / BF.RX.1000.AL.R / BF.RX.600.AL.R

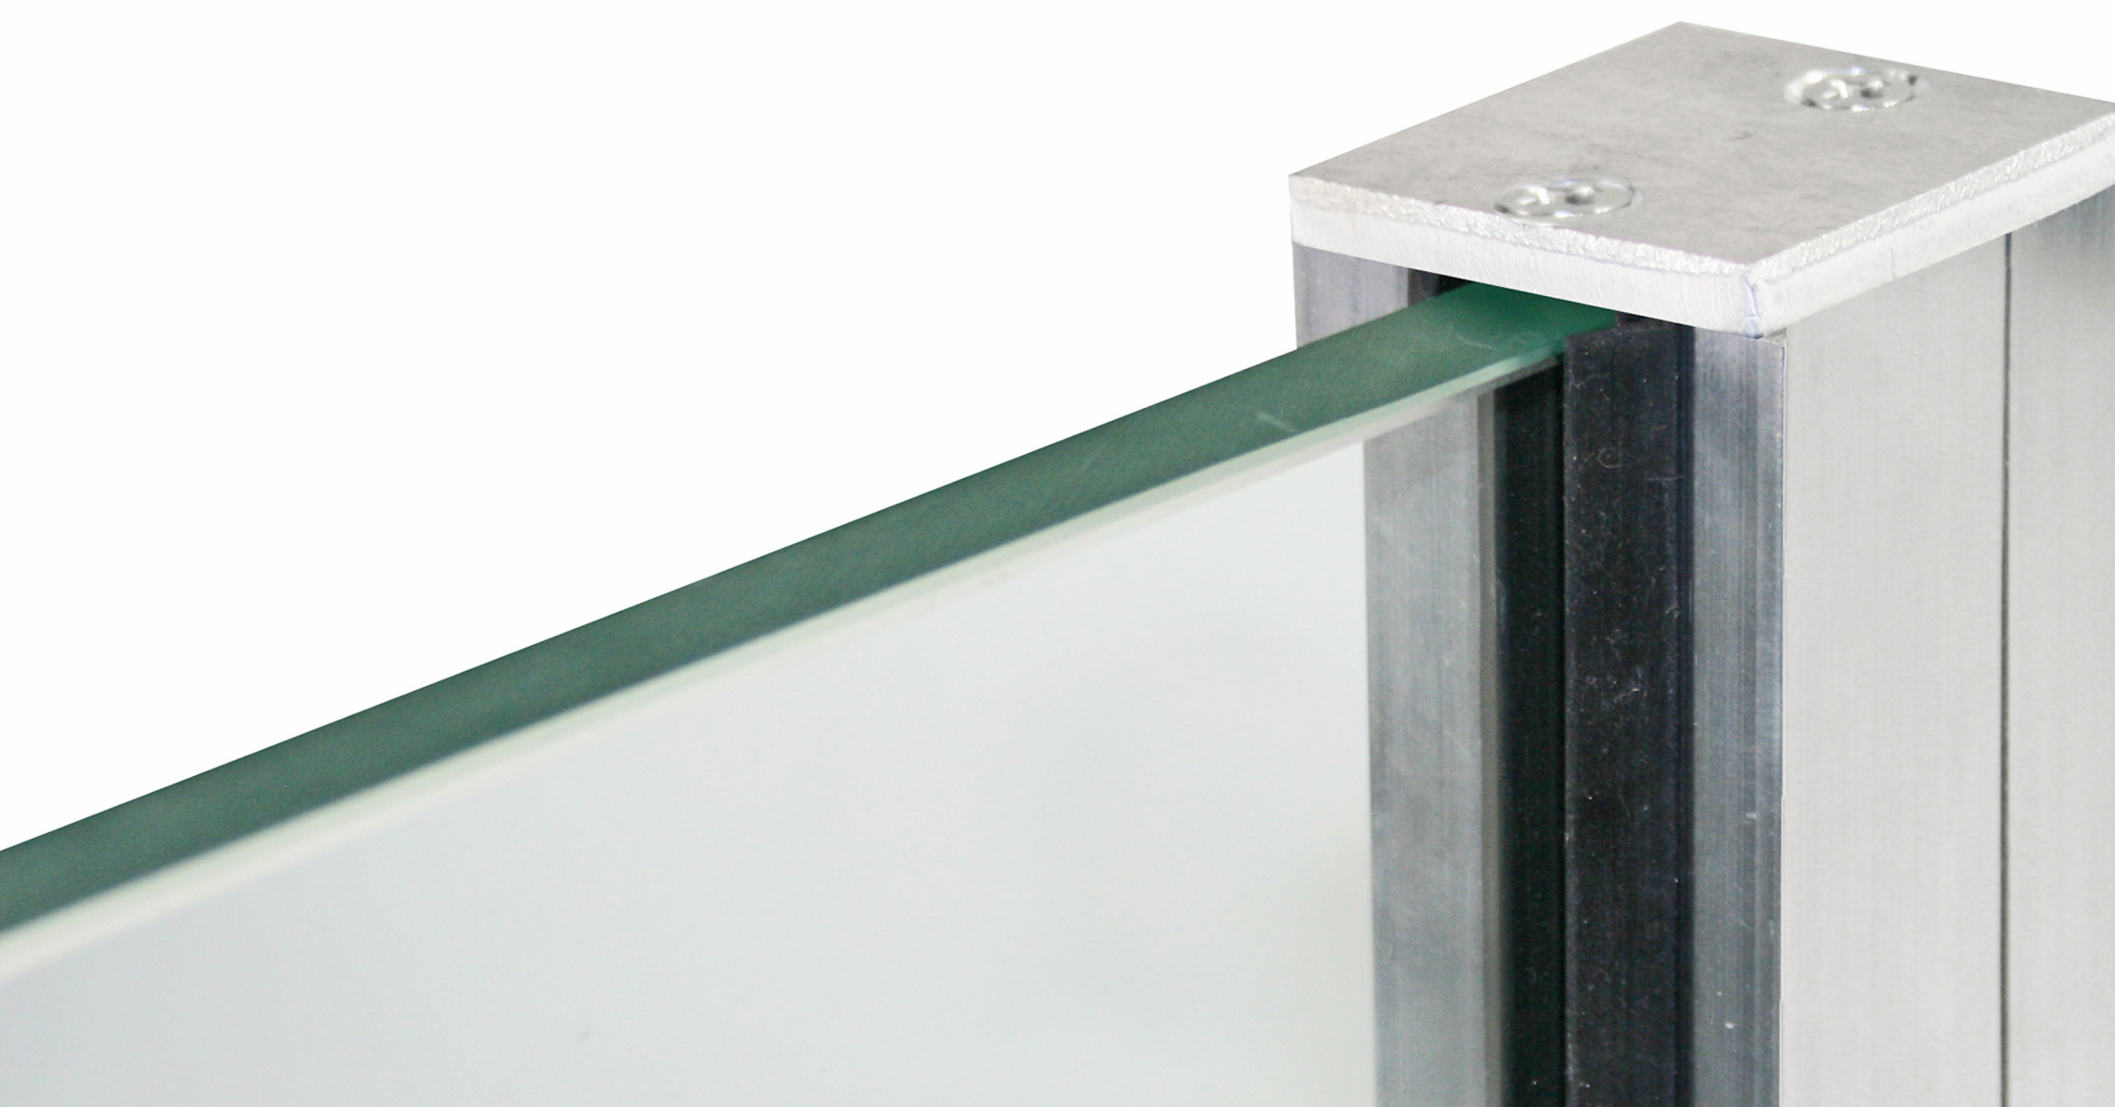


TECHNICAL DATA


BF.RX.1 100.AL.R QUICK AND EASY ASSEMBLY

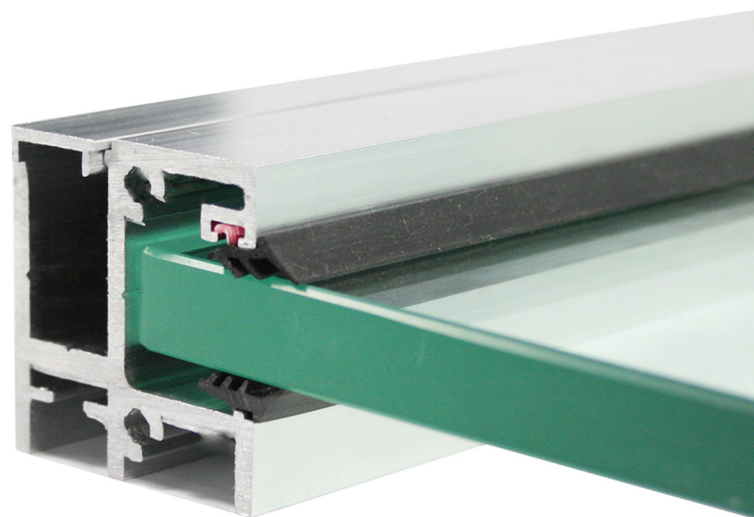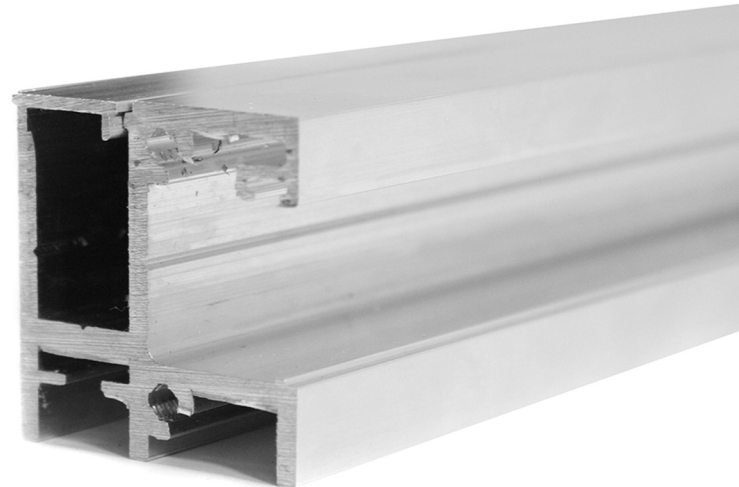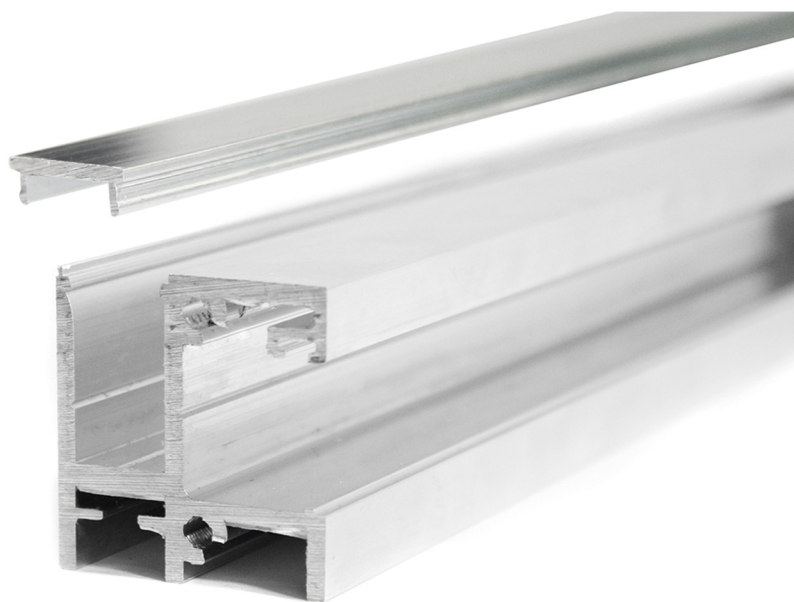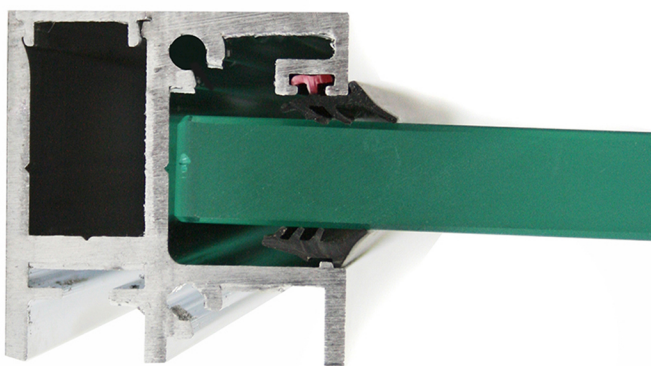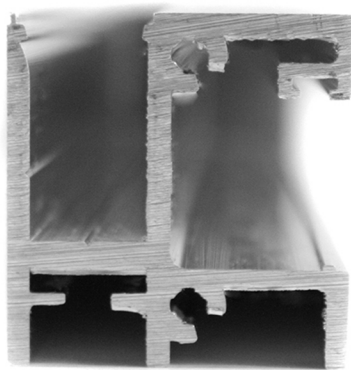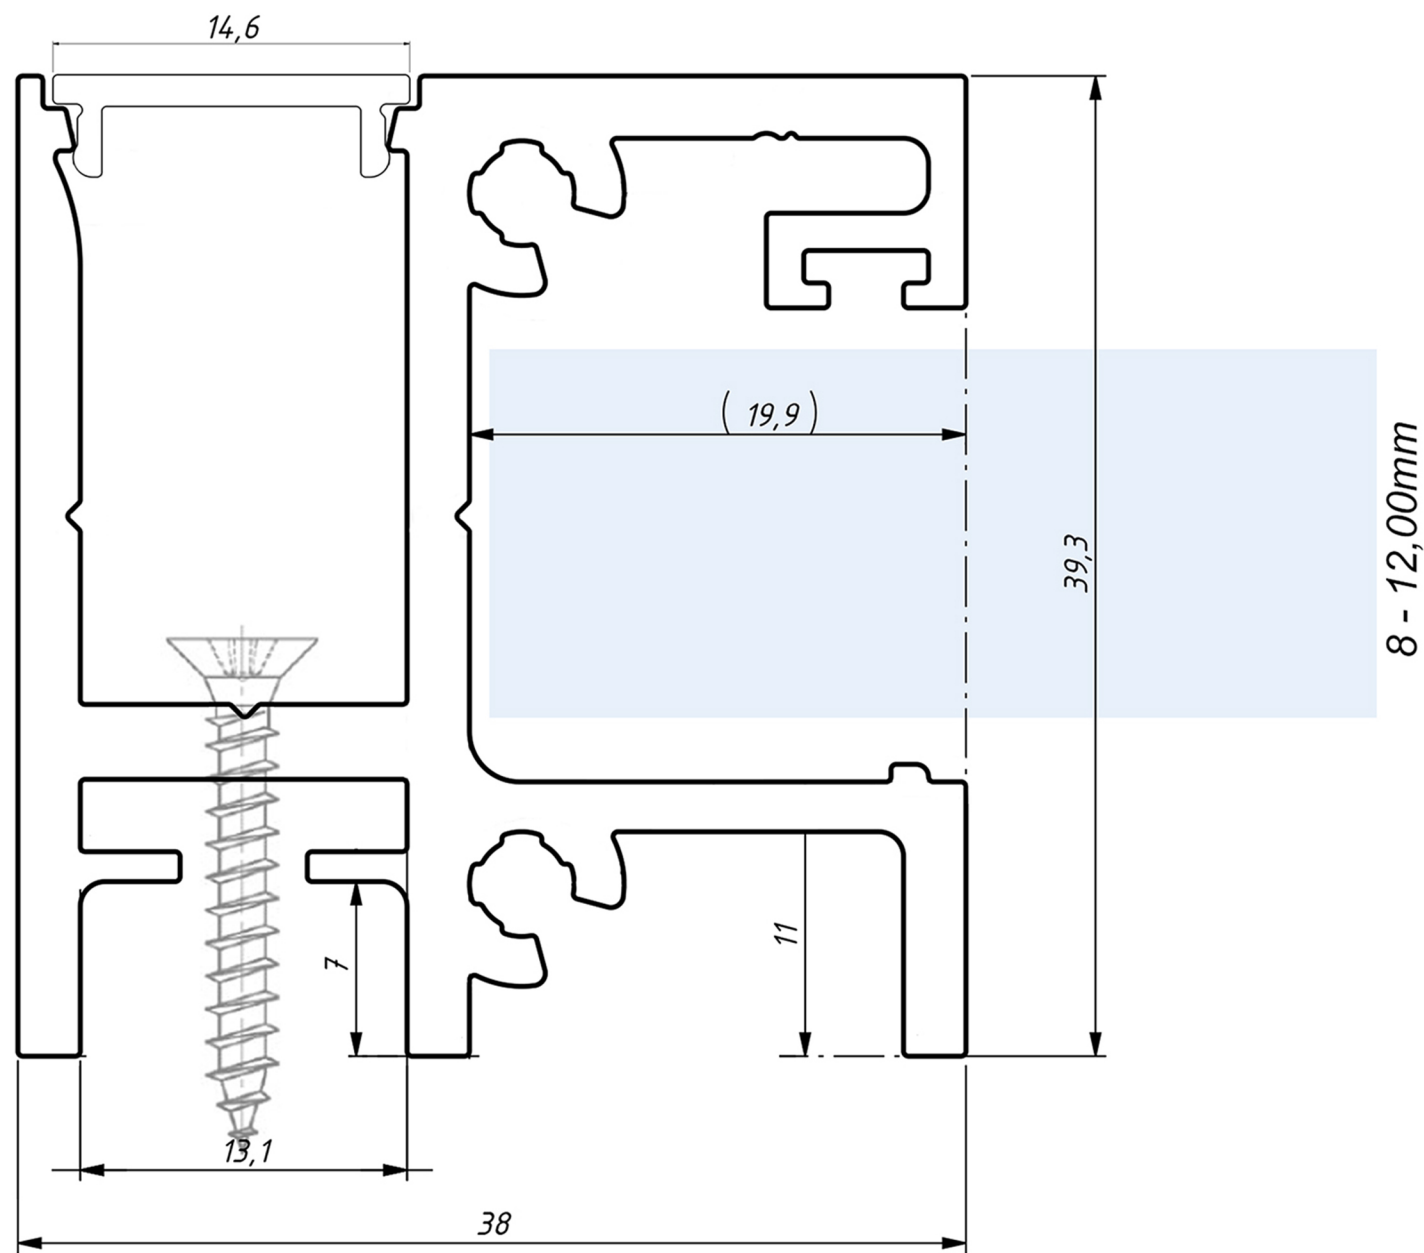








Glass thickness 8 - 8.76mm

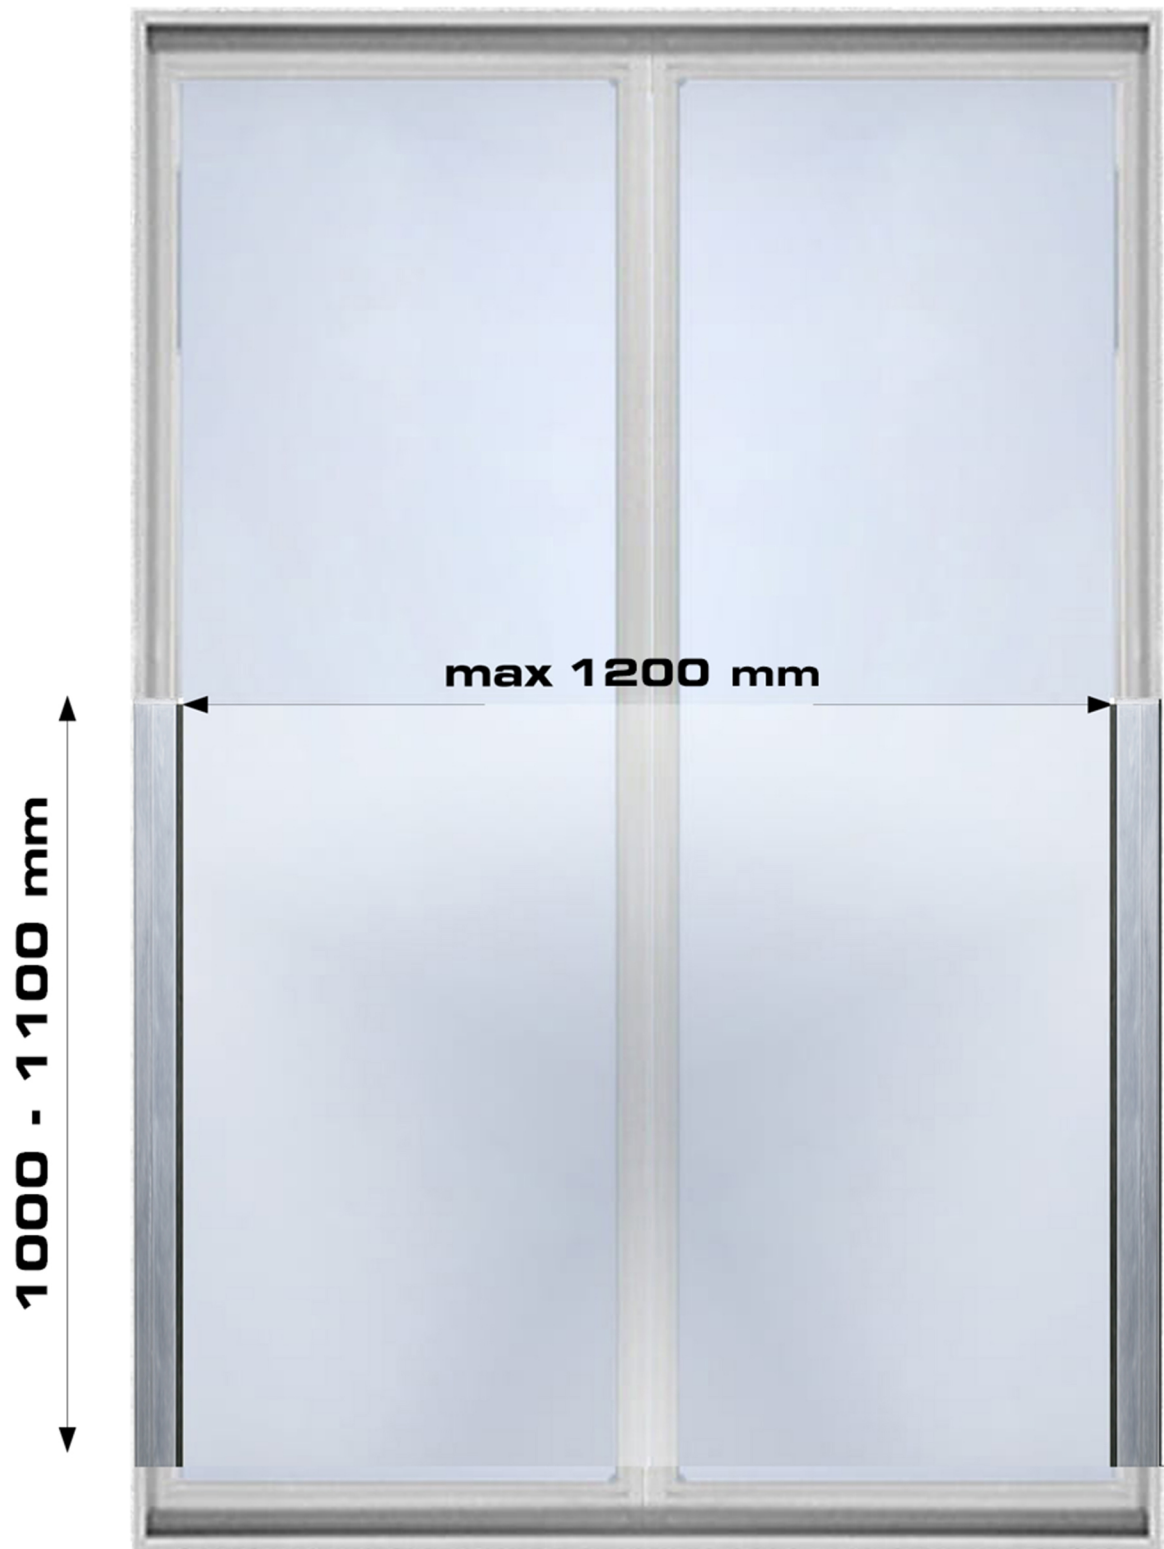

Glass thickness 10 - 10.76mm

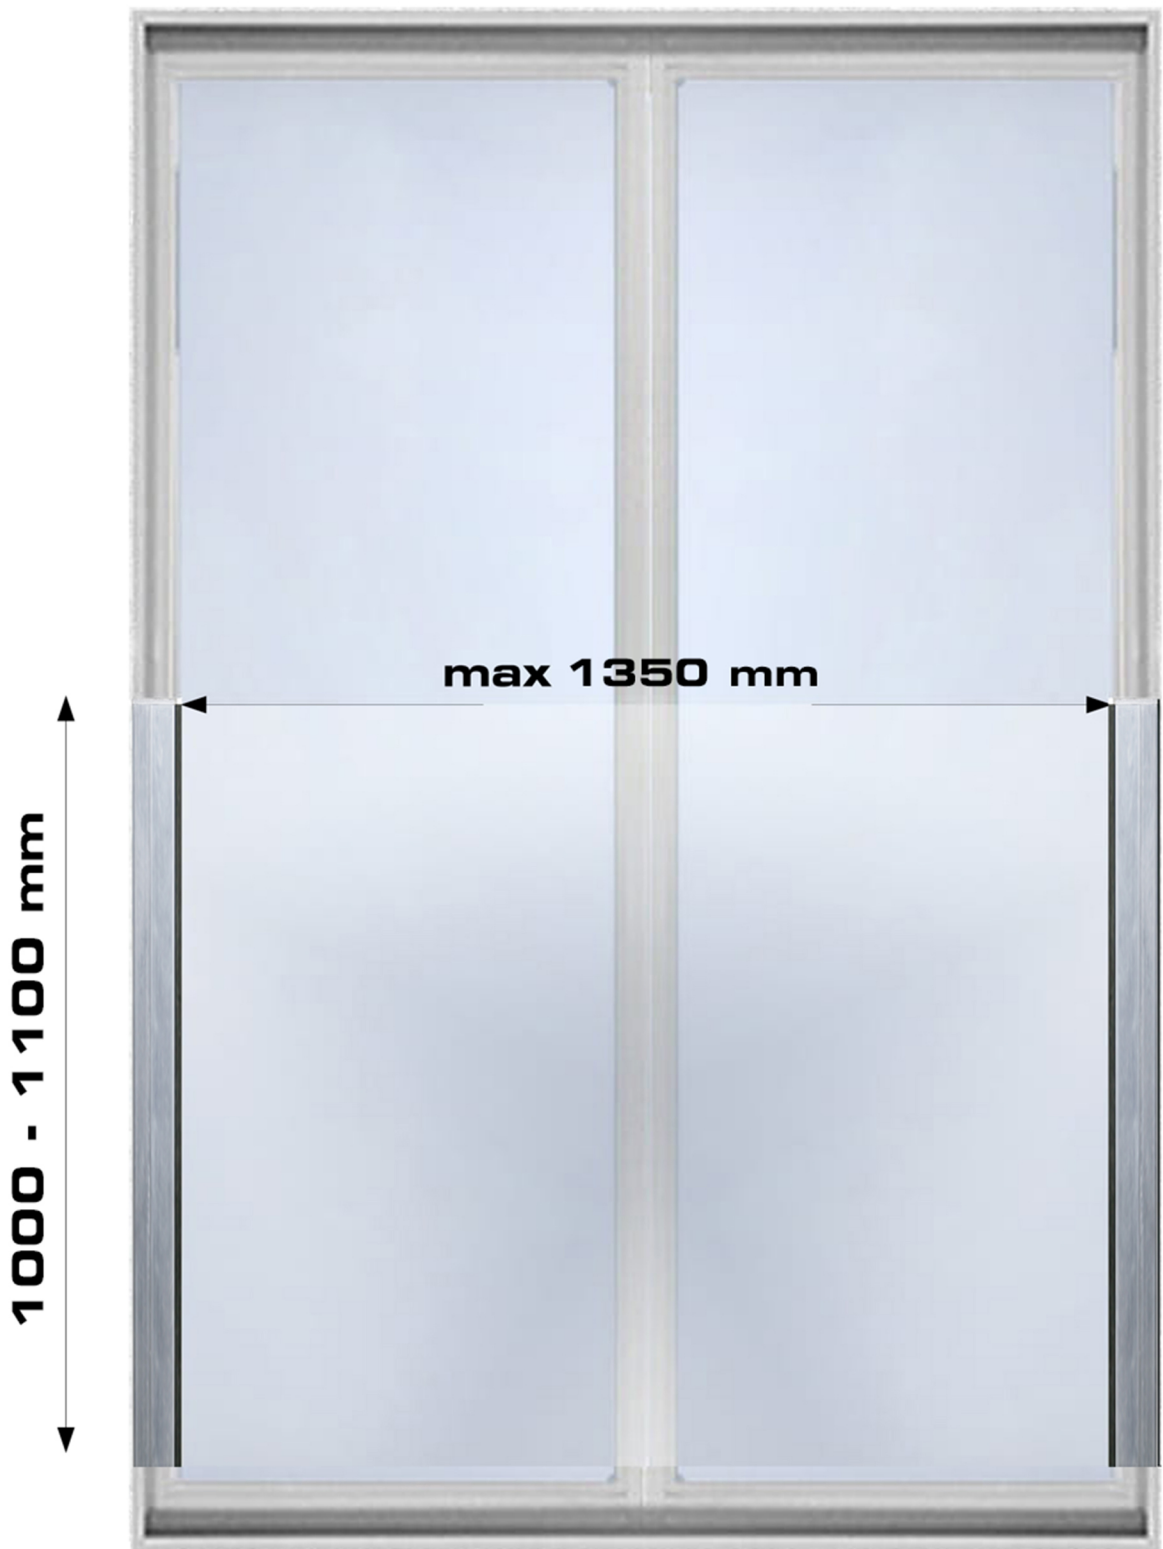

Glass thickness 12 - 12.76mm

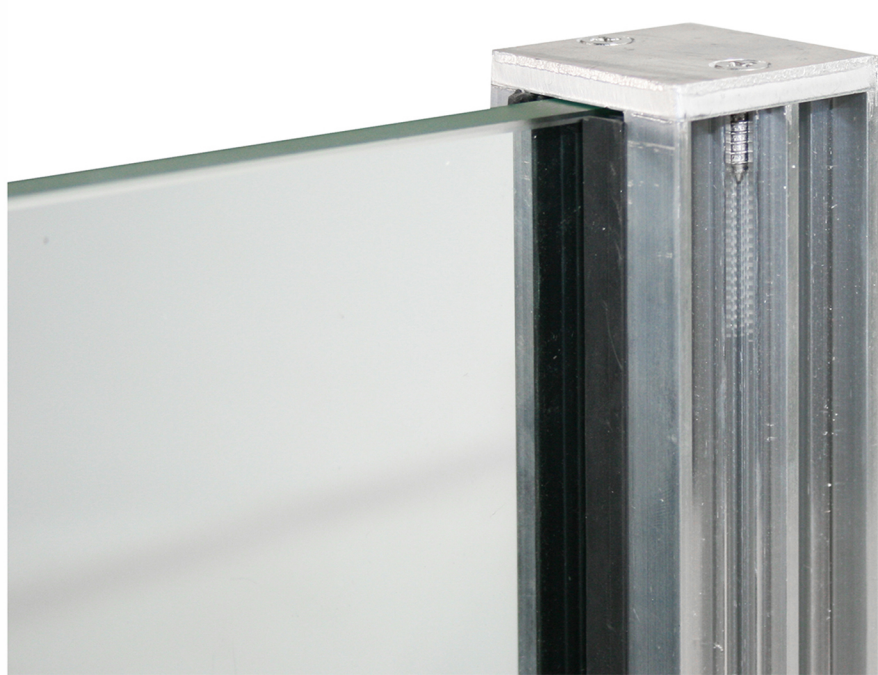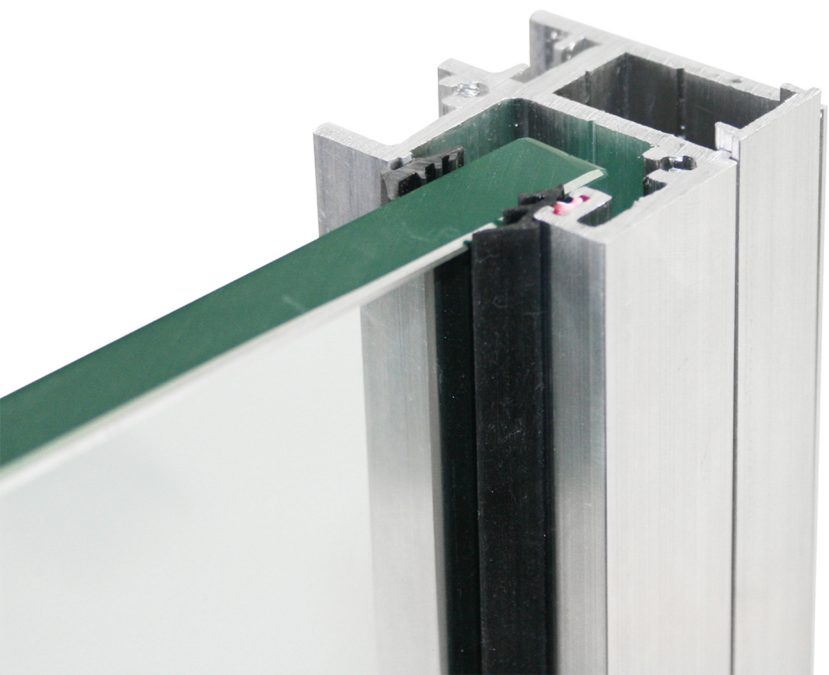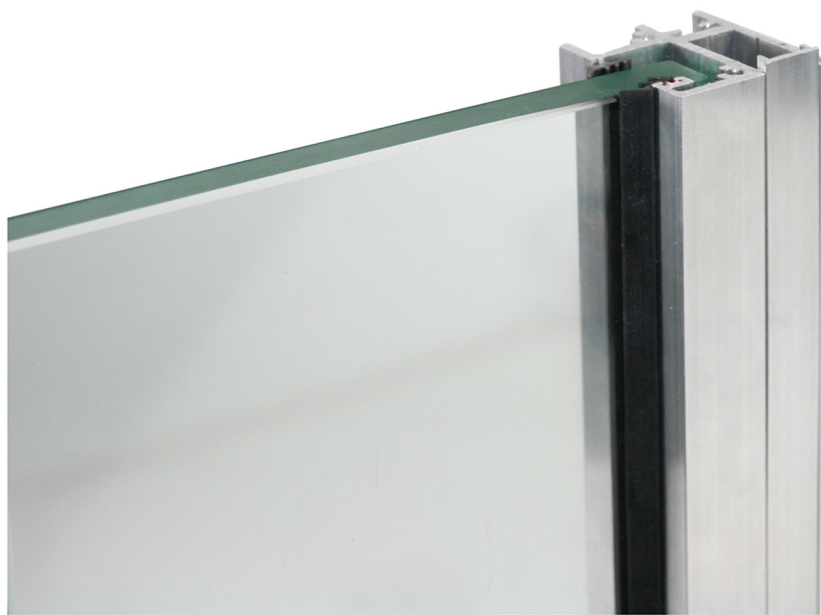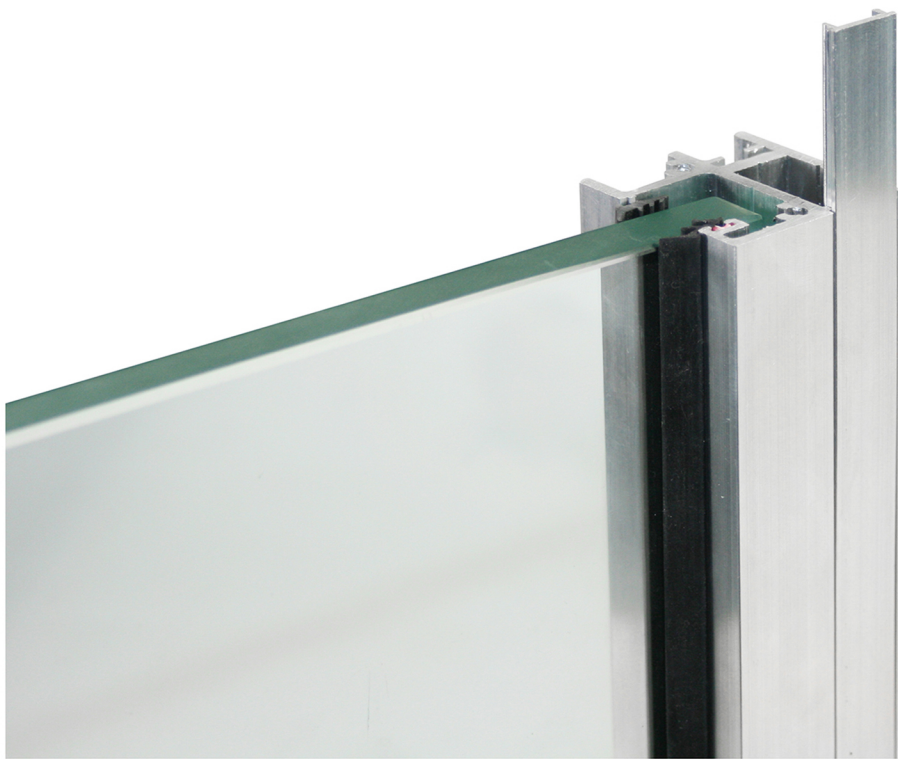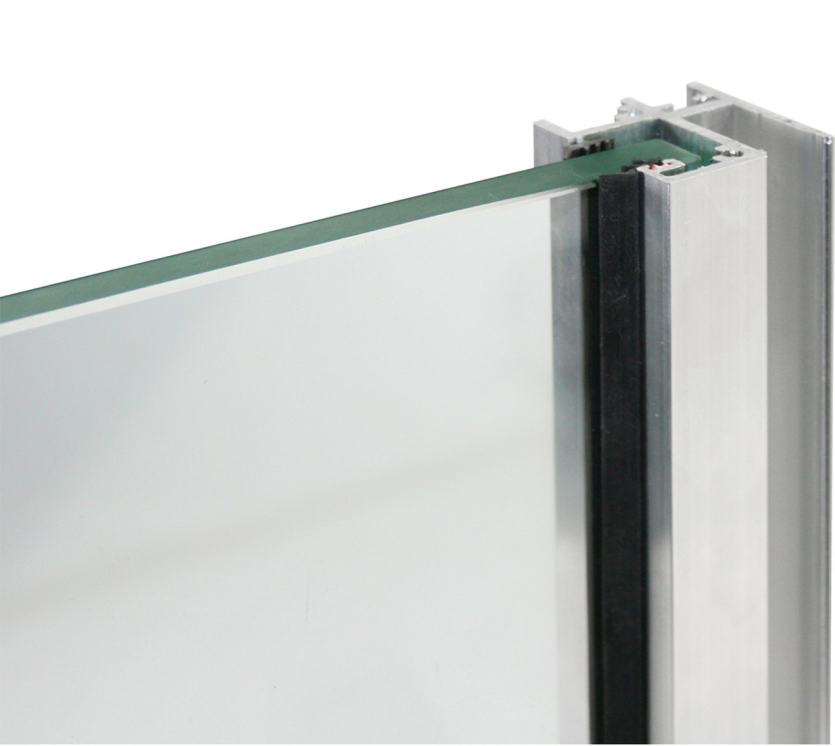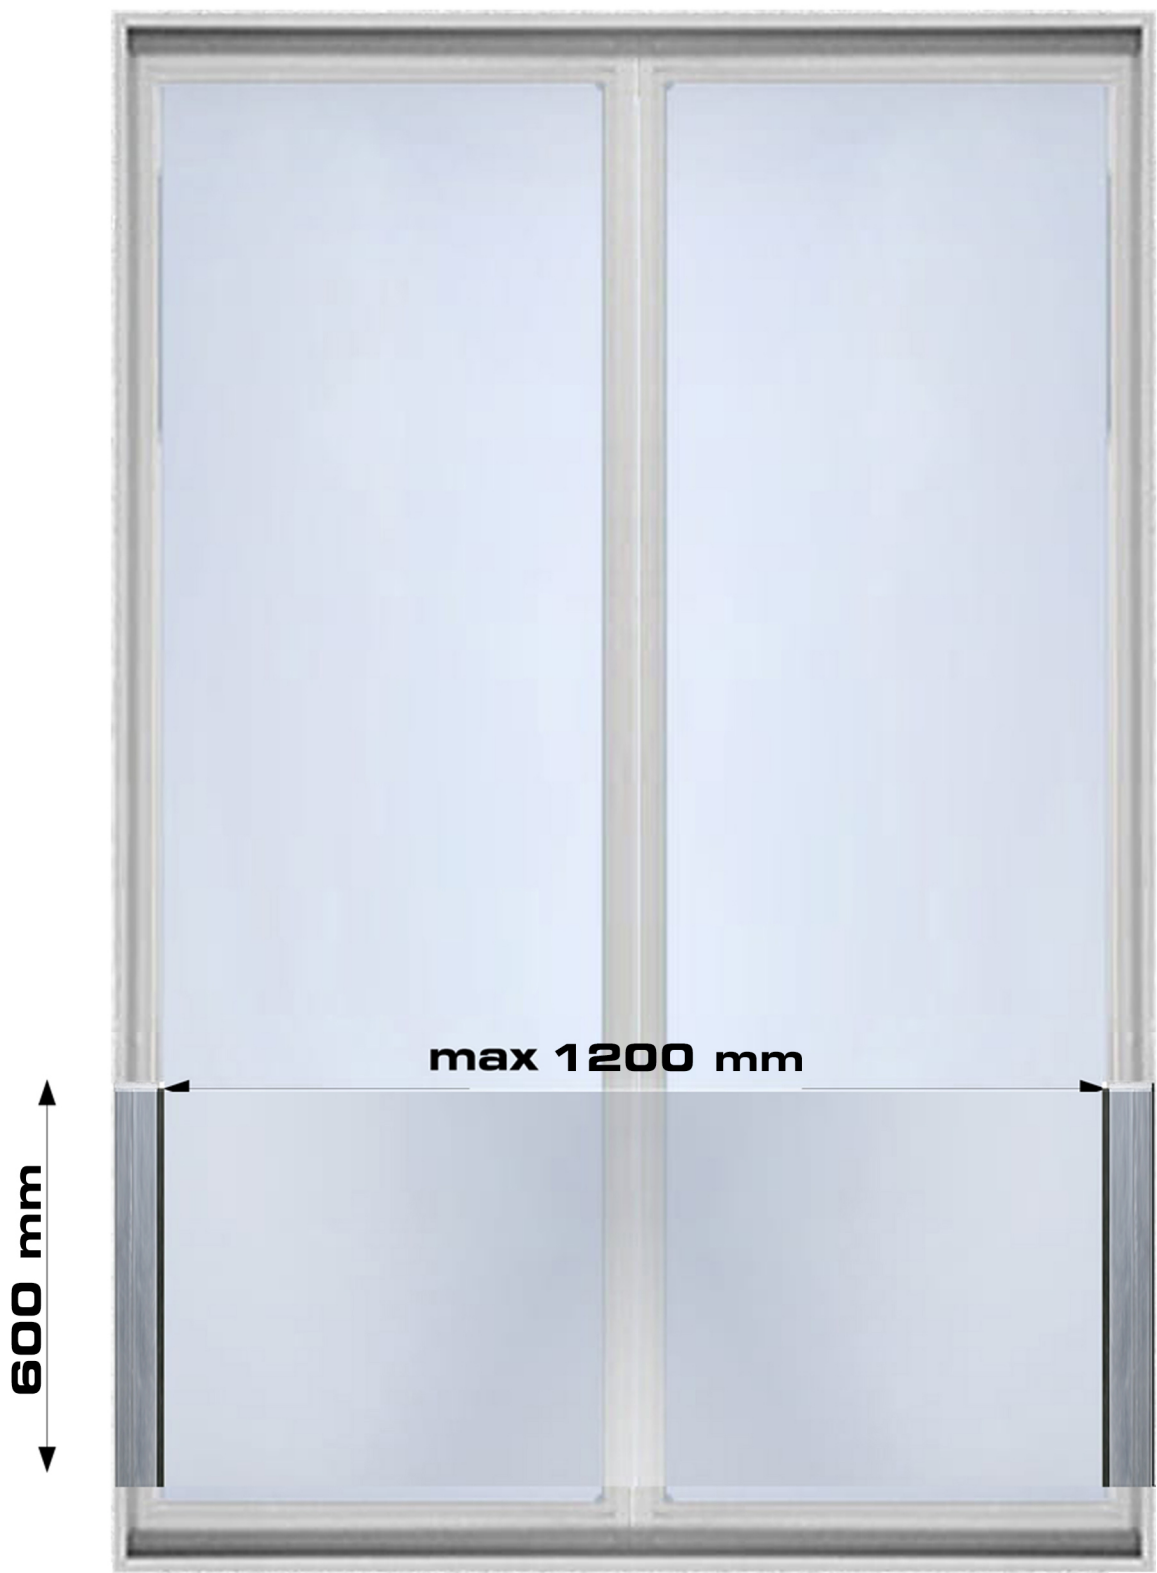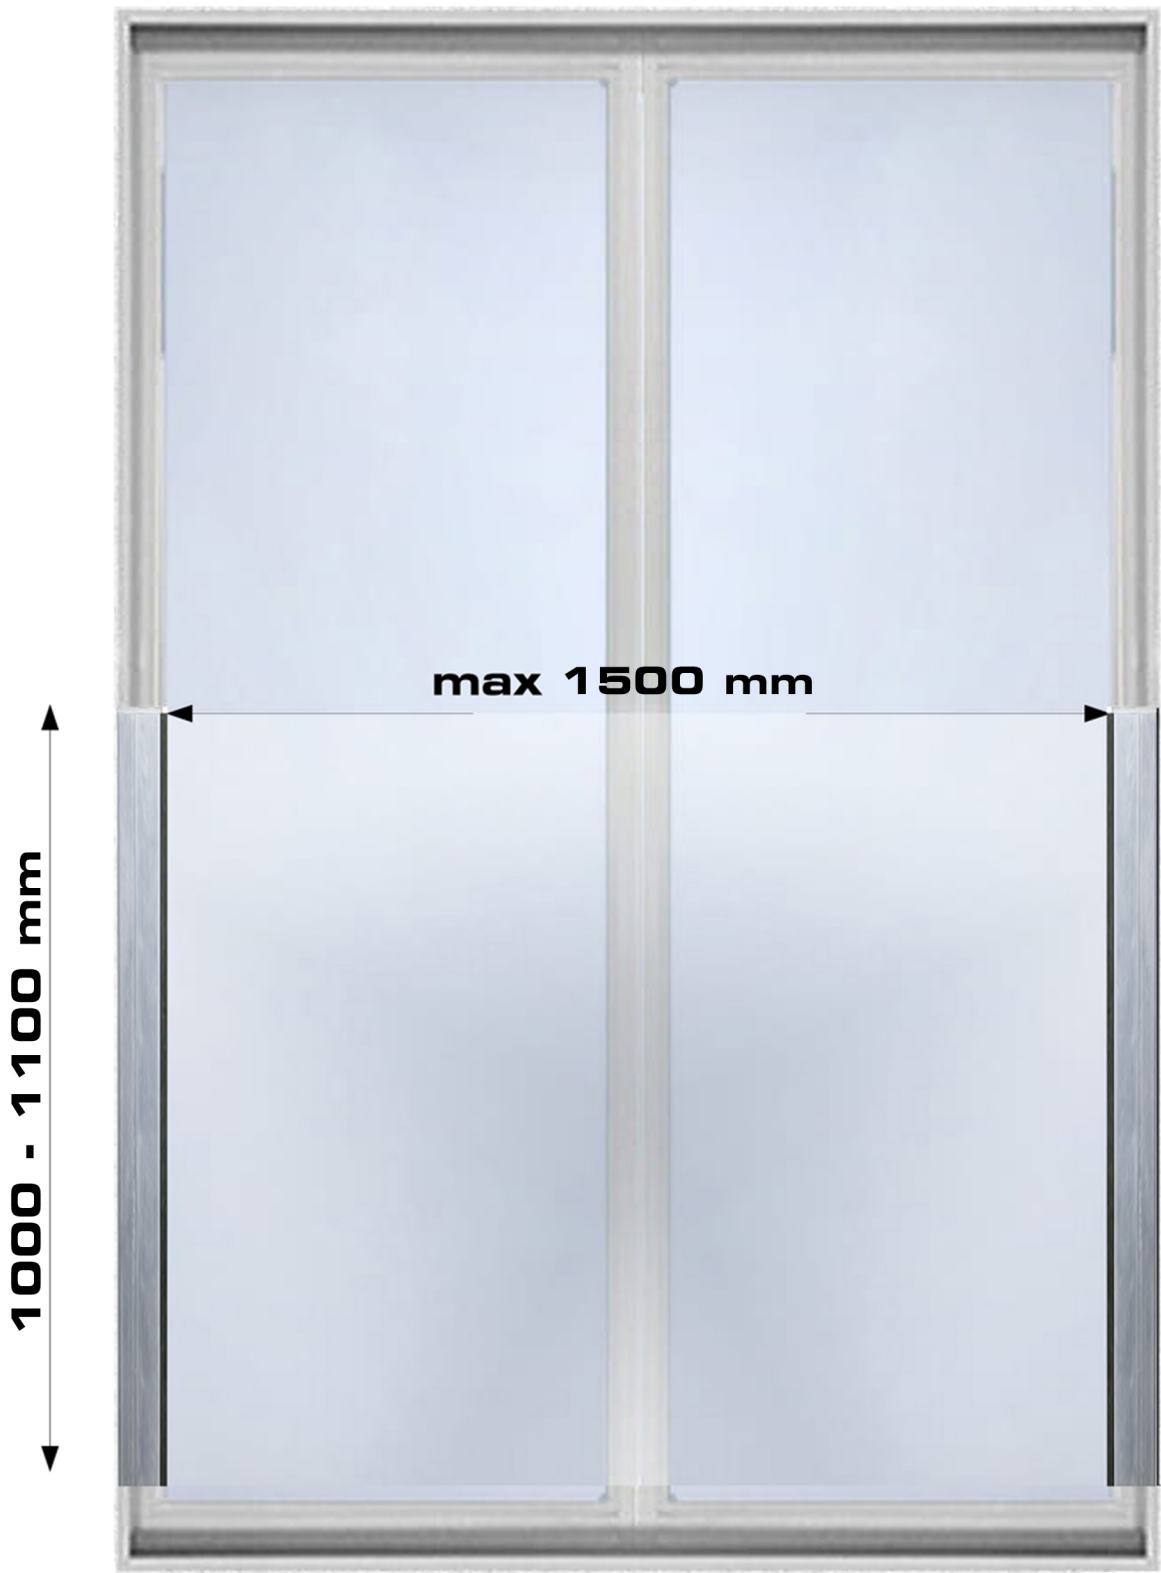


TECHNICAL DATA


BF.RX.1 100.AL.R




ALUMINIUM FRAME

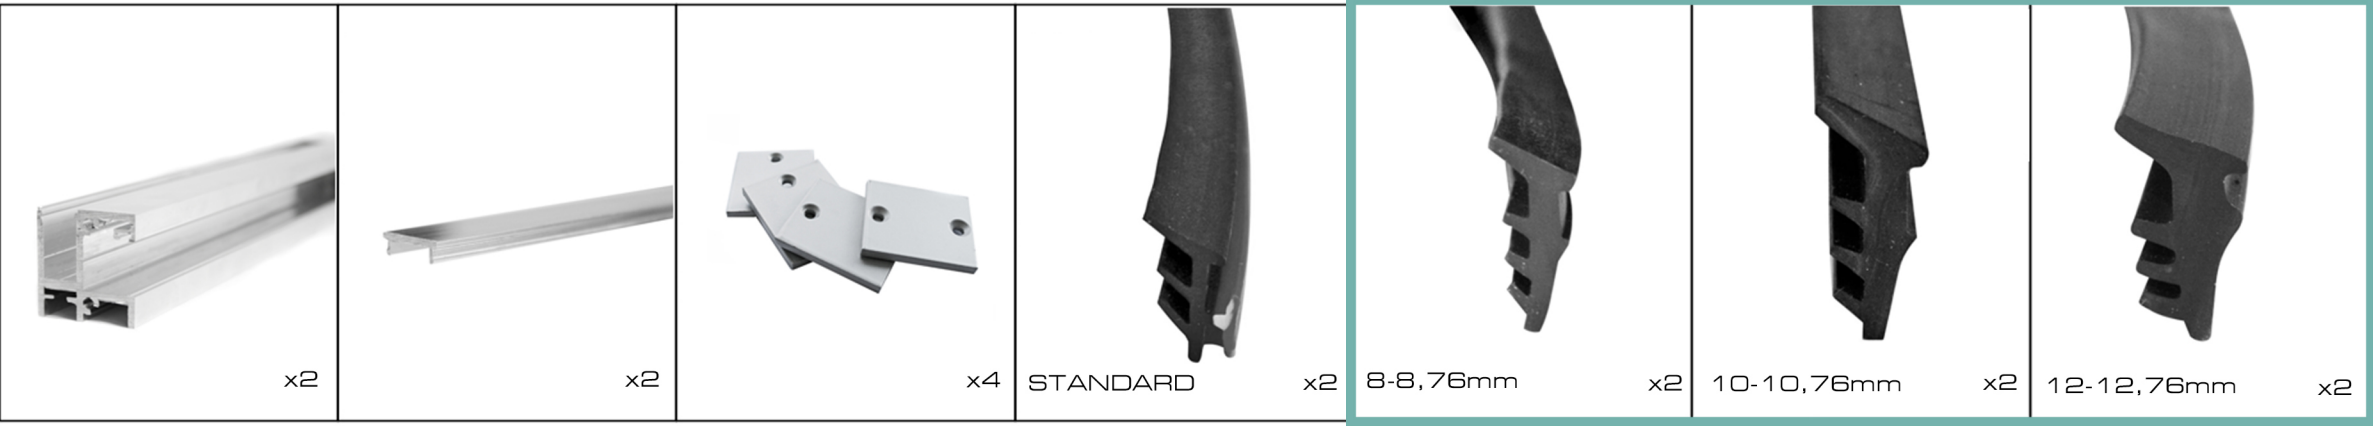

SCREWS




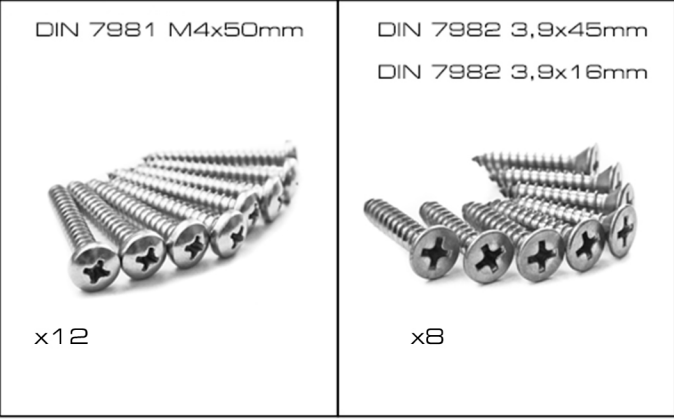


TOOLS

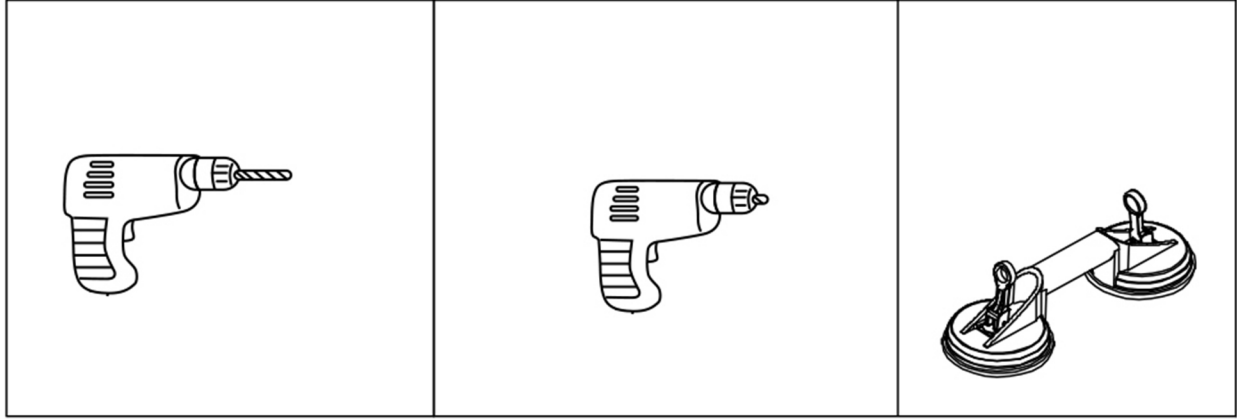

1

Before screwing the profiles to the window frame, you need to screw bottom caps.

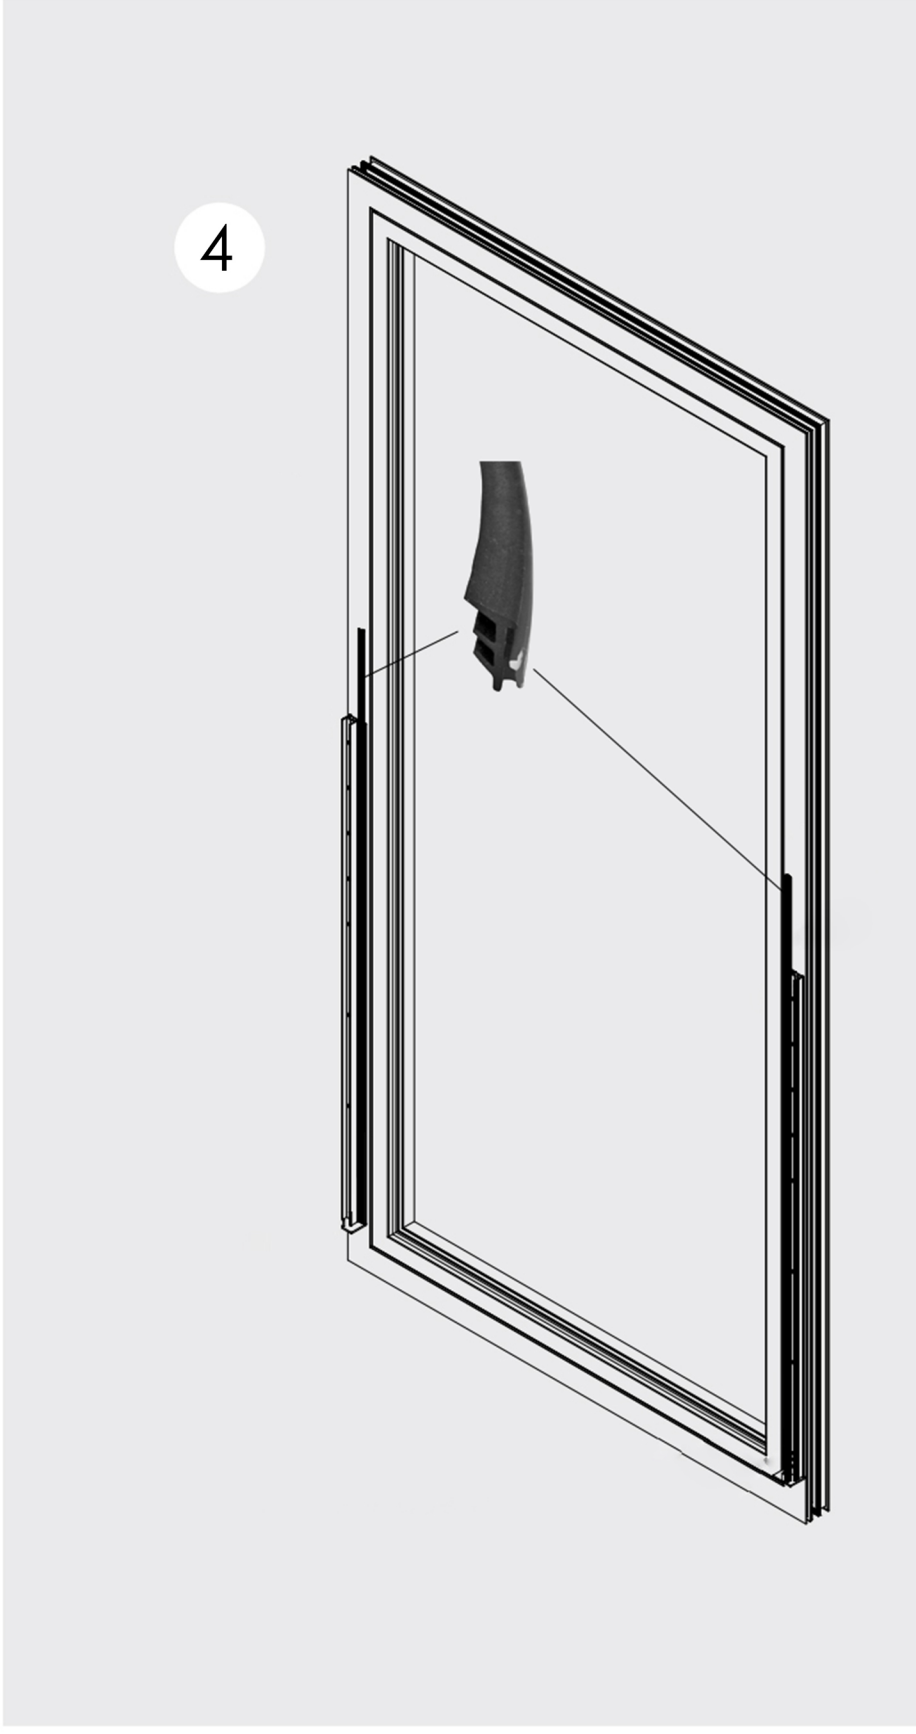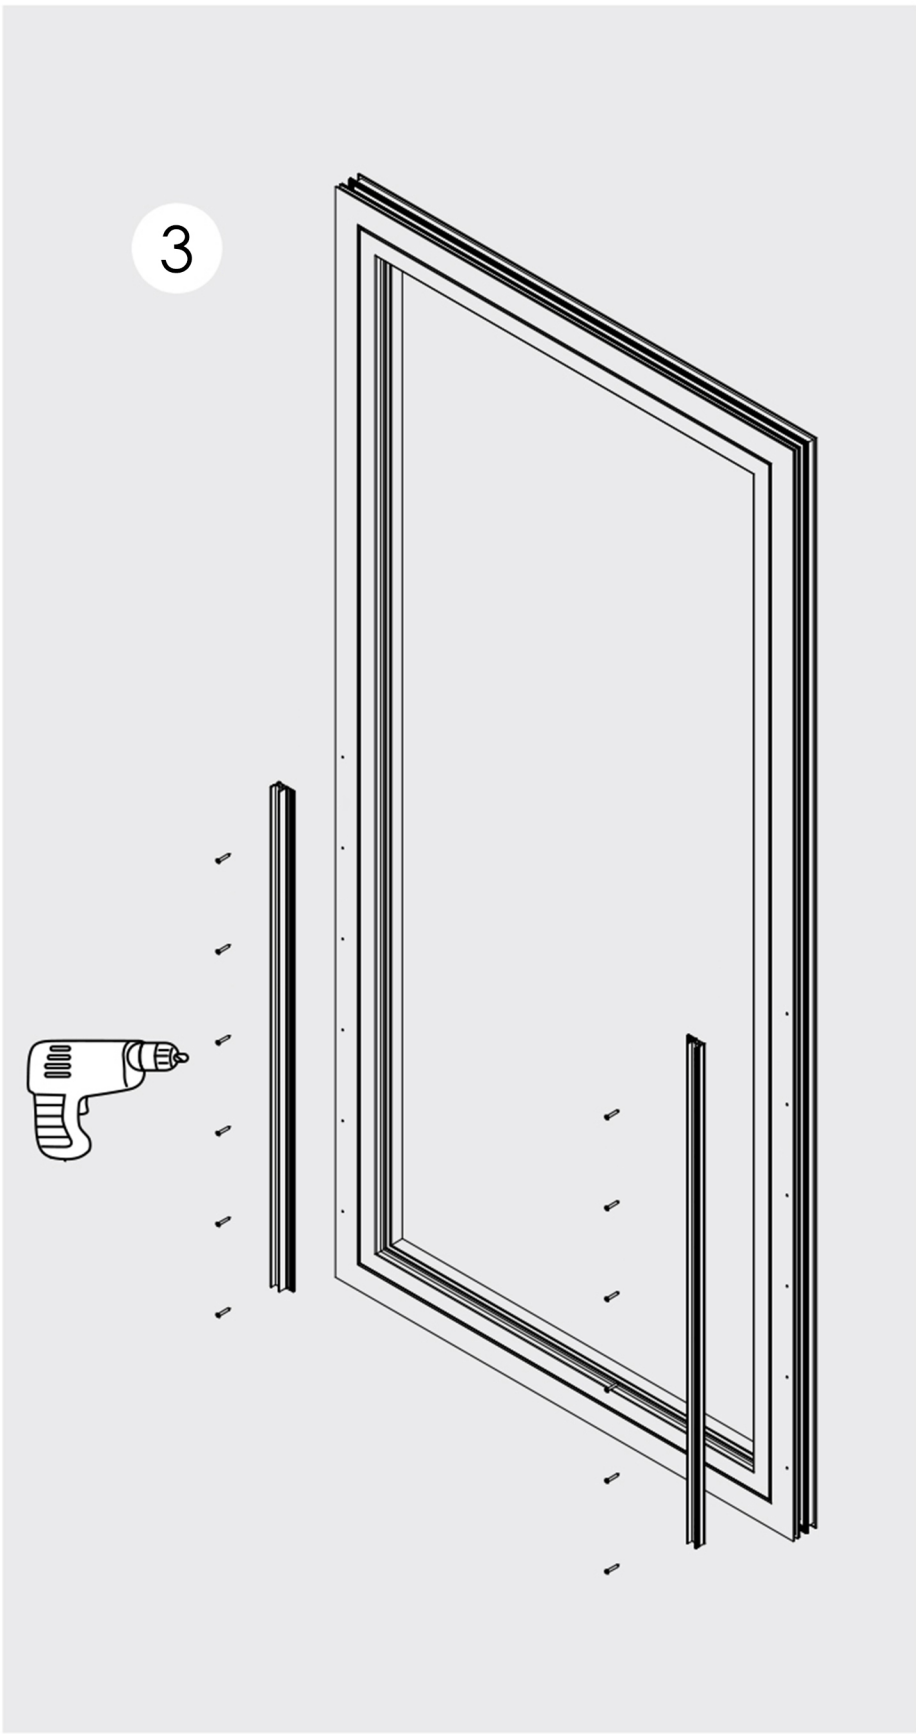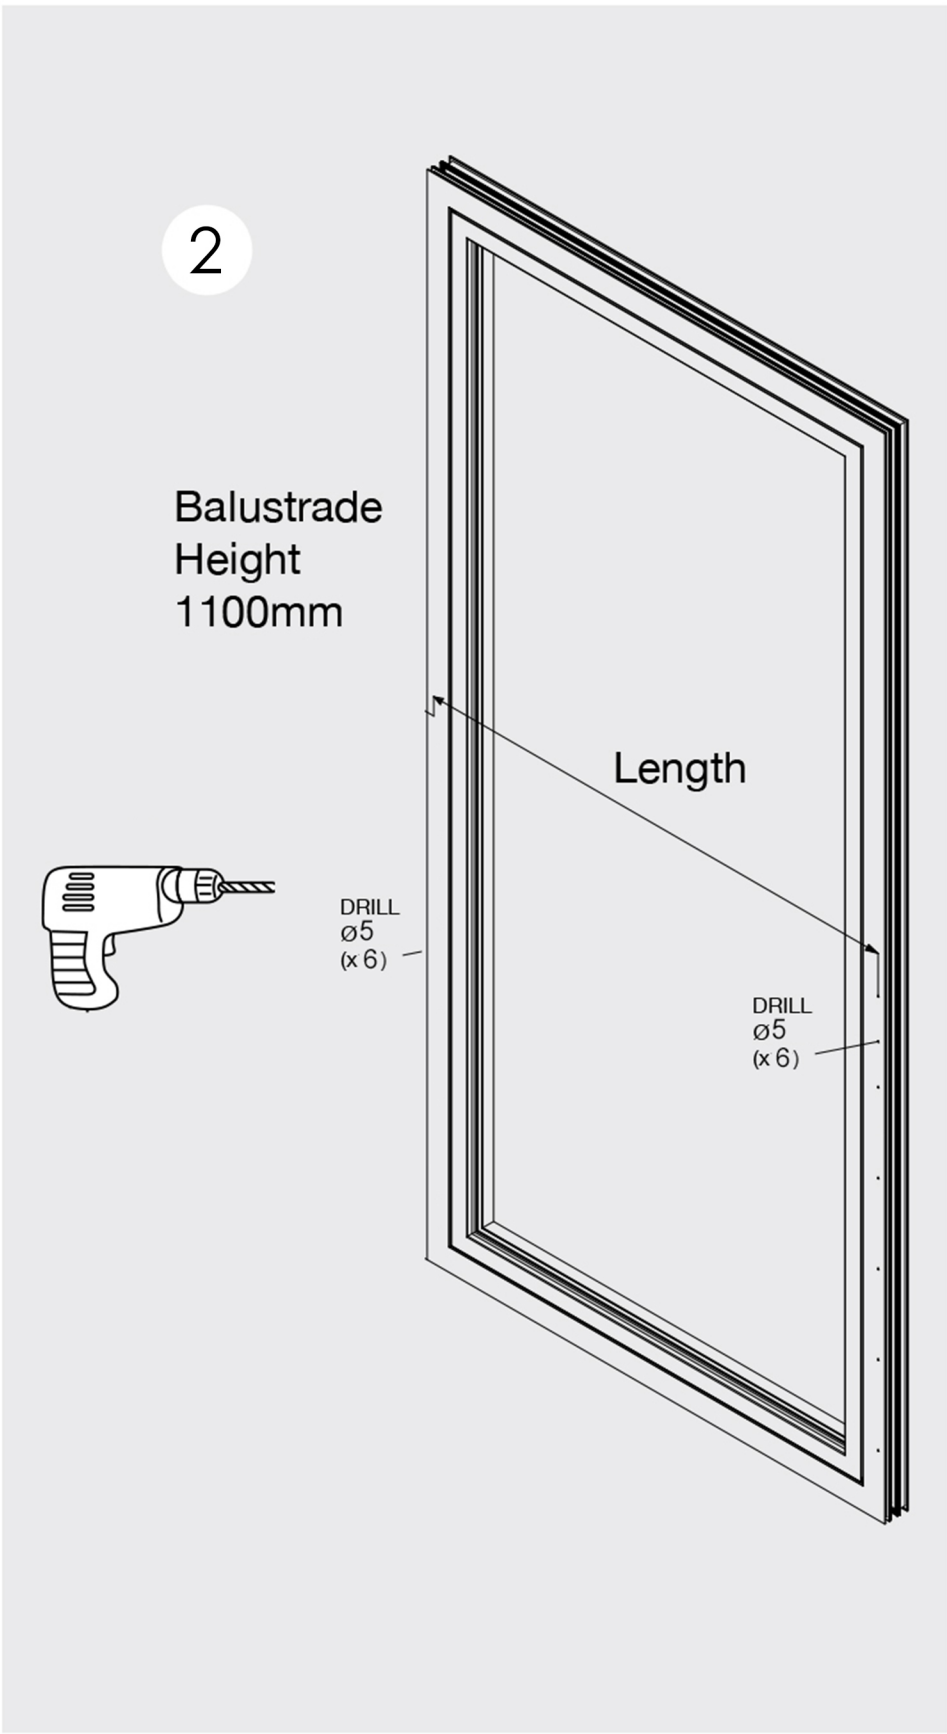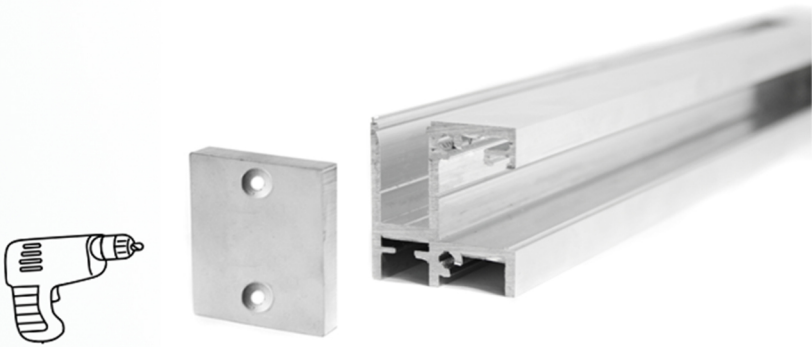


TECHNICAL DATA


BF.RX.1 100.AL.R

RX
POLSKA


5

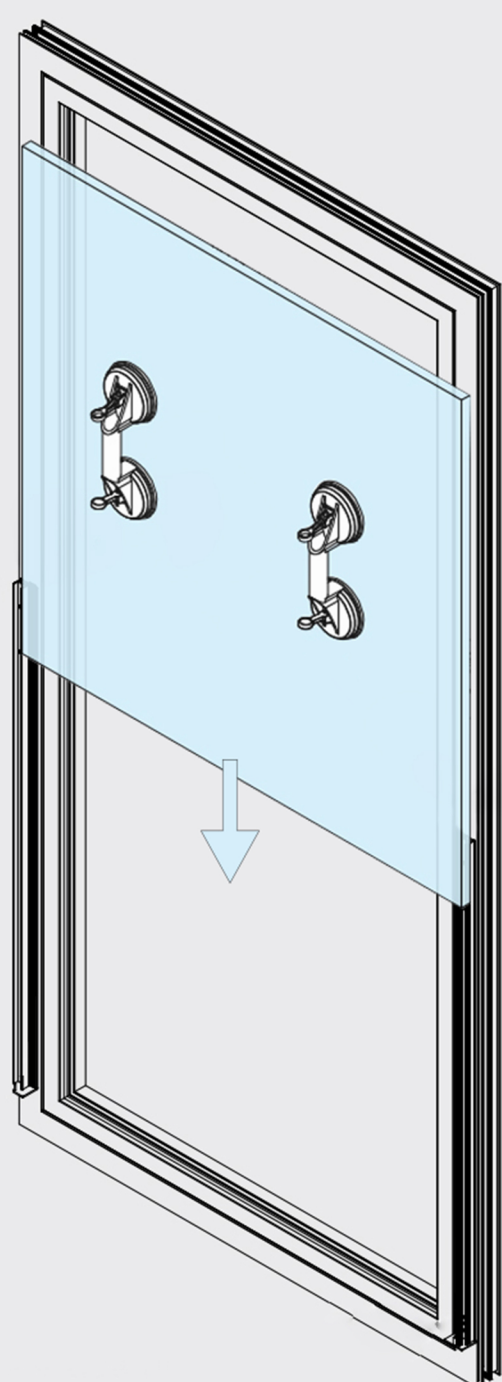


6

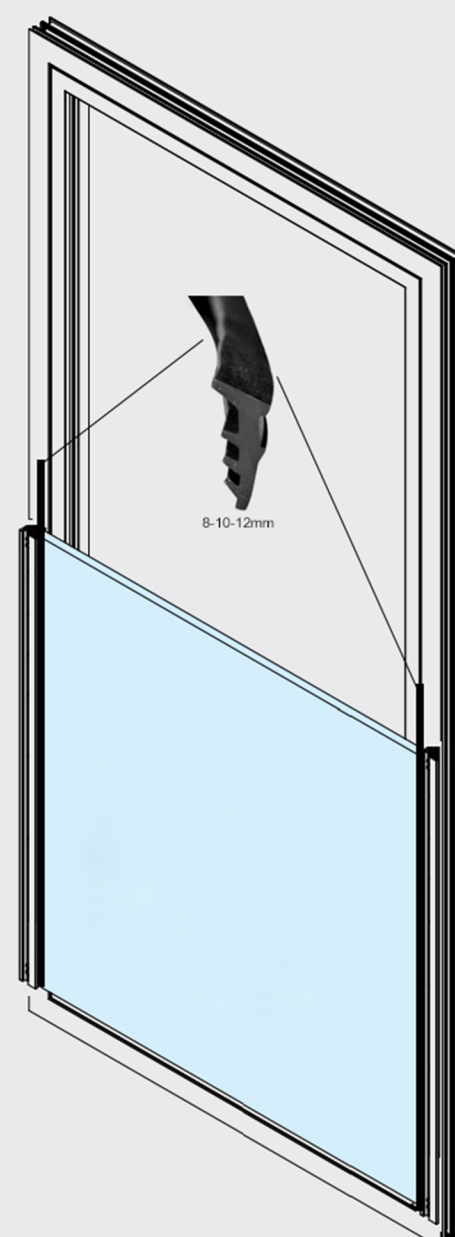

7

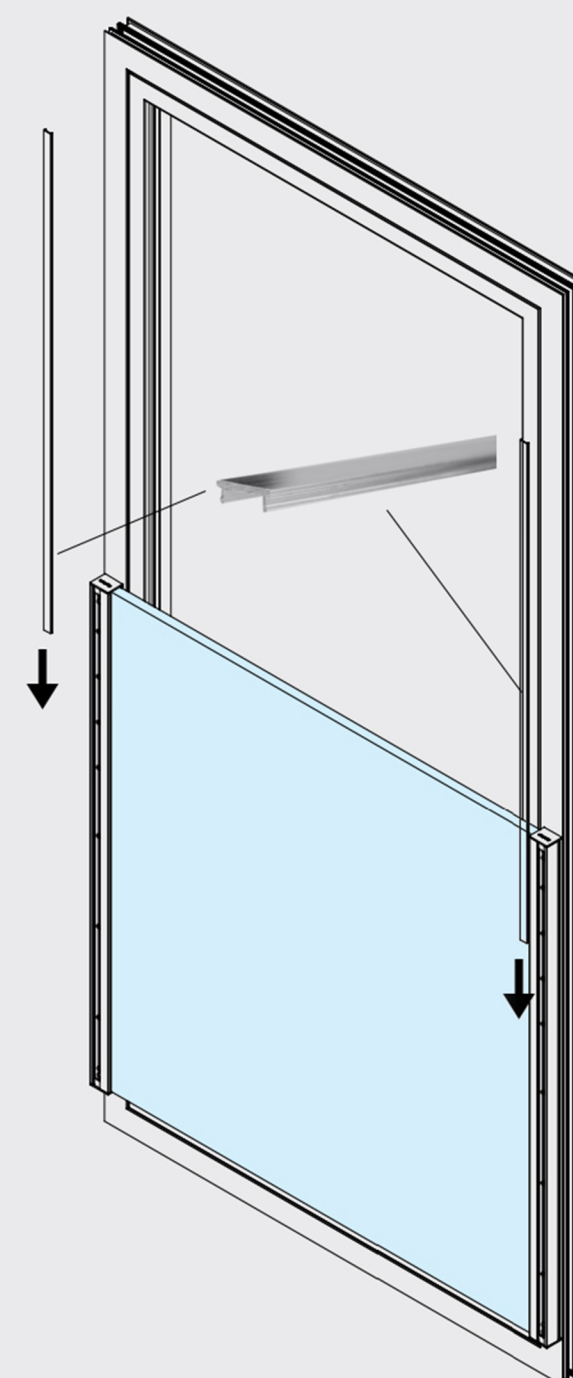

8

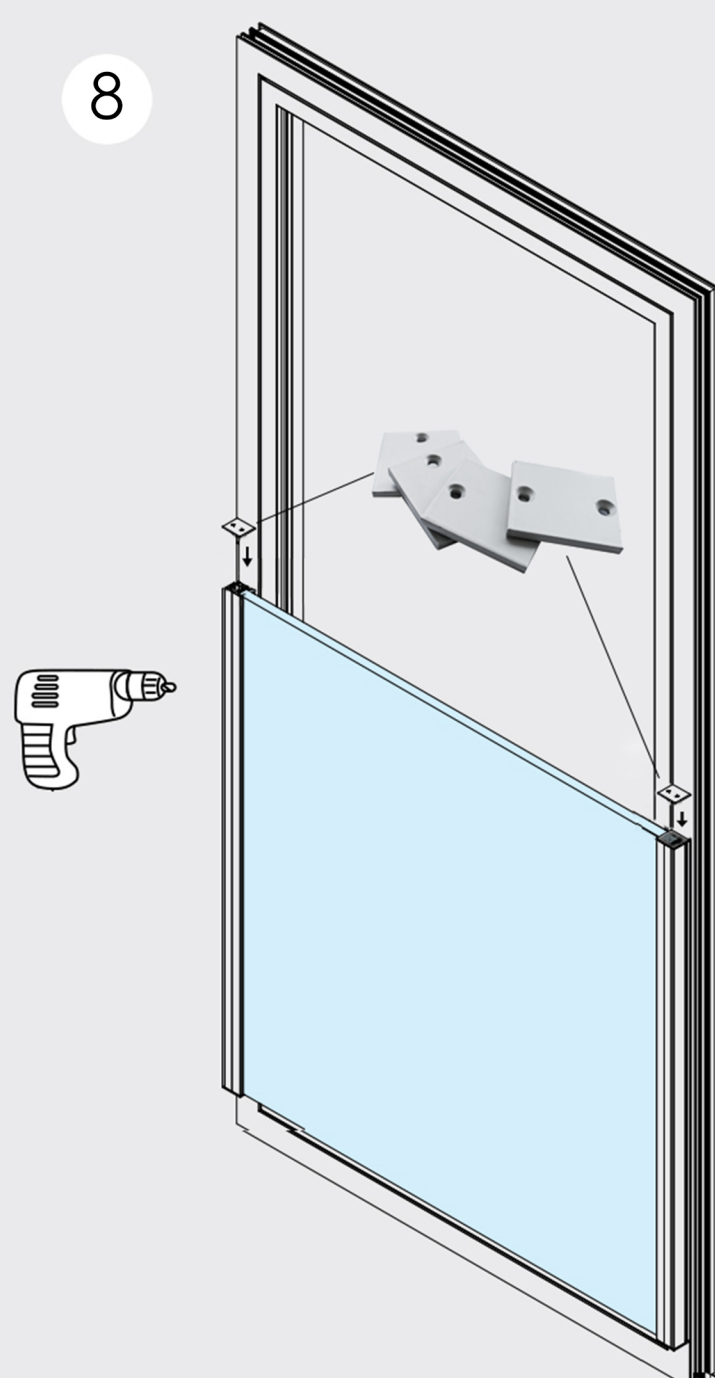

9

